

Adjust Threshold

To adjust the threshold on an exterior door, pop off the small circular covers to reveal the screws underneath. Take a screwdriver to tighten (which will raise the threshold) or loosen (which will lower the threshold). Then replace the covers.



