

Crestline Vinyl Sliders

Removing Sash

Slide operating sash to middle of opening. Grasp top of sash on both sides while pushing up on upper window track. Tip the top of the sash towards you and lift out of bottom track. Reverse procedure when putting sash back in the window.

Screen Removal

Pull black tab towards center of the window. Push screen out past window frame and pull away from side until screen is completely removed.

Lubricating

First remove sash. Clean dirt and debris from track and spray the track with silicone lubricant.

Window Not Closing Tightly

Verify track is clean. Interlock may not be latching. When closing window push out on lockside of operating sash to engage interlock.